


CargoMax on Greek computers

To get CargoMax working on Greek vessels you need to check the following in the Control Panel – Region settings.

If it is set to Greek, then it will not open any ships. It may run CargoMax but cause an error when you try to load or change ships.

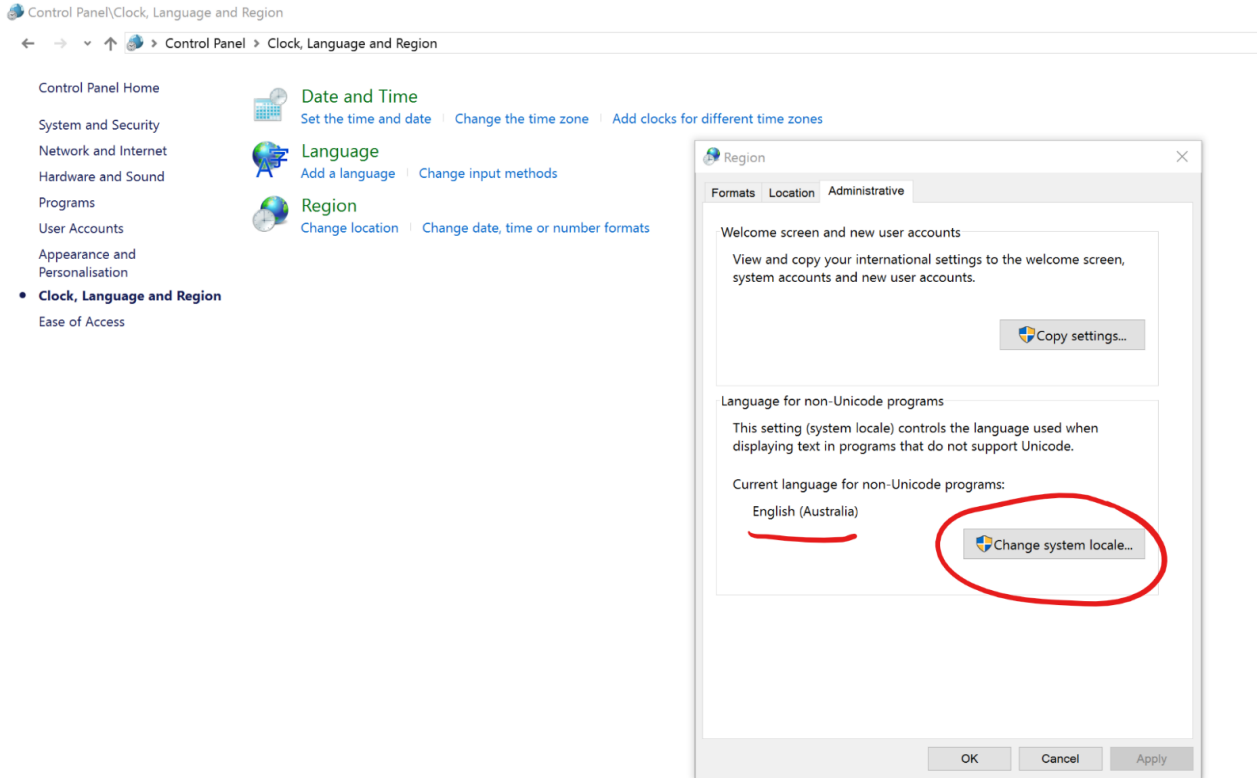

You also need to check that the decimal is set as a “.” And not a “,”

